

10 UHF TV points

Requires one EV5-186 PSU
Use top 5 and bottom 5 outputs

First unit switch ON - terminates unused outputs.



20 UHF TV points

Requires one EV5-186 PSU
Use top 10 and bottom 10 outputs

First unit switch OFF

Second unit switch ON - terminates unused outputs.



40 UHF TV points

Requires one EV5-186 PSU
Use top 20 and bottom 20 outputs

First unit switch OFF
Second unit switch OFF
Third unit switch OFF

Fourth unit switch ON - terminates unused outputs.



NOTES

The EV5-110A terrestrial distribution amplifier can be added to ANY IRS system and will pass satellite signals from input to output. IF 18v DC is present on any satellite leg, no additional PSUs are required.

Units shown with couplers - this can be replaced with coax cables if an EV5-110A is need to be placed in another location.

To use this for a TV only system.

Connect an 18v PSU to the first black input and the TV aerial to the white input. Only two couplers are required, black and white.